

# GROUND ZERO®


## GERMAN ENGINEERING

### GZDSP REM 4-8XII

### Bedienungsanleitung


Diese Fernbedienung ermöglicht die komfortable Einstellung des GZDSP 4-8XII von der Fahrer- oder Beifahrerposition aus.

#### Funktionen

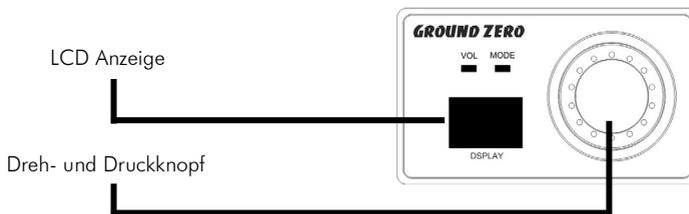

<b>Funktion des Dreh- und Druckknopfes (Standardmodus)</b>	Im Standardmodus wird mit dem Drehknopf die Gesamtlautstärke (0-66) des GZDSP 4-8XII durch Drehen im oder gegen den Uhrzeigersinn geregelt. Durch kurzes Drücken des Drehreglers wird der Presetmodus aufgerufen. Nach 8 Sekunden ohne Betätigung wird automatisch der Standardmodus aufgerufen.
<b>Funktion des Drehknopfes (Presetmodus)</b>	Mittels des Drehreglers kann ein gespeichertes Preset (Einstellung) aufgerufen werden. Durch Drehen kann ein Preset ausgewählt und durch Drücken des Knopfes geladen werden. Sollte das Display im Presetmodus eine 0 anzeigen, stehen keine gespeicherten Presets zur Verfügung. Durch Drücken des Knopfes gelangt man wieder in den Standardmodus. Nach 8 Sekunden ohne Betätigung wird automatisch der Standardmodus aufgerufen.

#### Anschluss der Fernbedienung



Es sollte immer die aktuellste Software-Version genutzt werden. Diese kann von der Ground Zero Webseite heruntergeladen werden.

#### Gewährleistungsbestimmungen

Die Gewährleistung entspricht der gesetzlichen Regelung. Eine Rücksendung kann nur nach vorheriger Absprache und in der Originalverpackung erfolgen. Bitte unbedingt einen maschinell erstellten Kaufbeleg und eine Fehlerbeschreibung beilegen. Von der Gewährleistung ausgeschlossen sind Defekte, die durch Überlastung, unsachgemäße Behandlung oder bei Teilnahme an Wettbewerben entstanden sind. Wir behalten uns das Recht vor, zukünftig nötige Änderungen oder Verbesserungen an dem Produkt vorzunehmen, ohne den Kunden darüber zu informieren.



**Ground Zero GmbH**  
 Erlenweg 25, 85658 Eggenstein, Germany  
 Tel. +49 (0)8095/873 830  
[www.ground-zero-audio.com](http://www.ground-zero-audio.com)



# GROUND ZERO®


## GERMAN ENGINEERING

### GZDSP REM 4-8XII

### Owner's manual


The remote control enables users to adjust the GZDSP 4-8XII easily from the driver's / passenger's seat.

#### Features

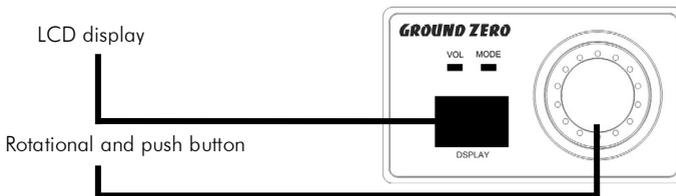

<p><b>Operation of the rotational and push button (in standard mode)</b></p>	<p>In standard mode, rotating the knob counter wise or in opposite direction adjusts the main level (0-66) of the GZDSP 4-8XII. Pushing the knob enables the preset mode. After 8 seconds without any action the standard mode recurs, automatically</p>
<p><b>Operation of the rotational button (in preset mode)</b></p>	<p>Rotating the knob selects the one of the presets from the memory. Pushing the knob confirms the selected preset and starts loading the setup. There are no presets available if the display shows preset 0. Pushing the button enables the standard mode. After 8 seconds without any action the standard mode recurs, automatically</p>

#### Connecting the remote control



It's recommended to use the latest available software version for the GZDSP unit. Download the latest version from the web page.

#### Terms of warranty

The limited warranty for this product is covered by Ground Zero's local distribution partners and their terms and conditions. For further information contact your local retailer or distributor.



**Ground Zero GmbH**  
 Erlenweg 25, 85658 Egmatung, Germany  
 Tel. +49 (0)8095/873 830  
[www.ground-zero-audio.com](http://www.ground-zero-audio.com)

