



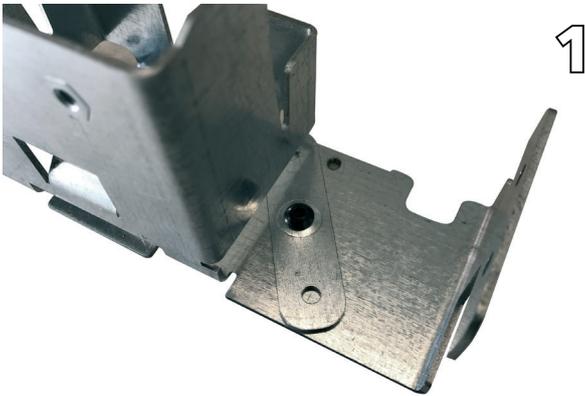


CA-HM-UNI-EVO.002 INSTALLATION KIT FOR SPH-EVO82DAB

EN - Installation Manual

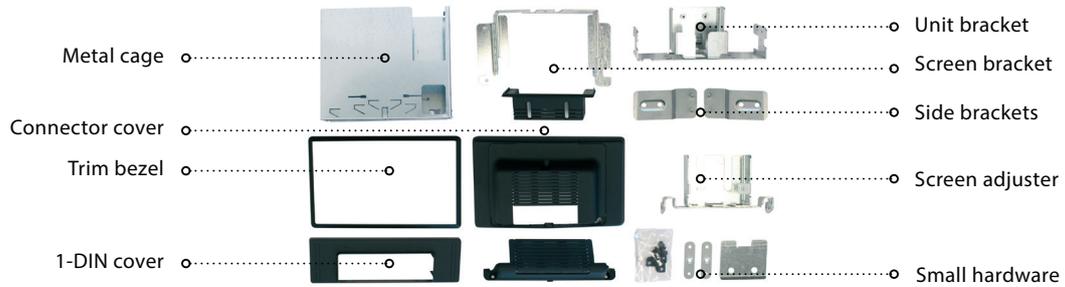


Mount the locking tabs (bulge up) onto the unit support

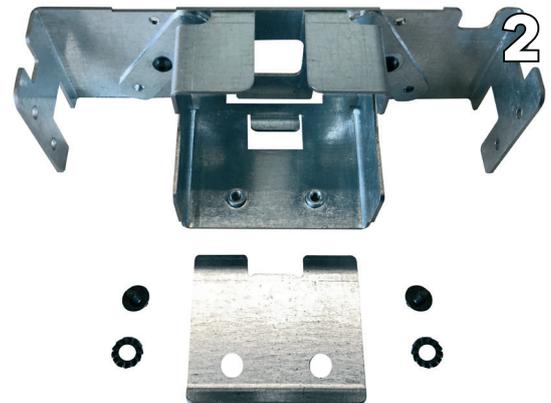

Install the sliding mecha with the supplied hardware



Install the side support with a wrench n°7 (not included)

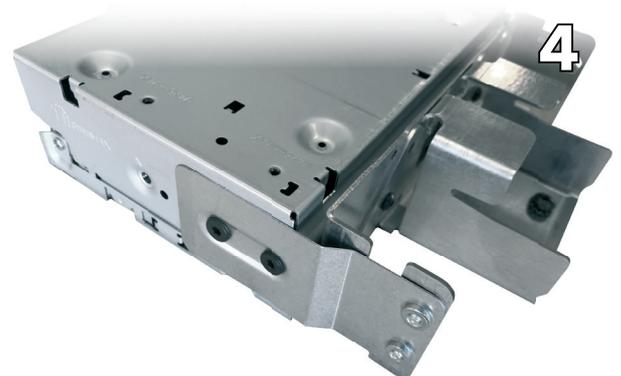


Once finalised, mount the complete bracket to the silver box using the supplied hex screws



Slide the metal cage into the vehicle with the opening on top




Whilst sliding the silver box in the car pull the display cable through using some tape (not included)

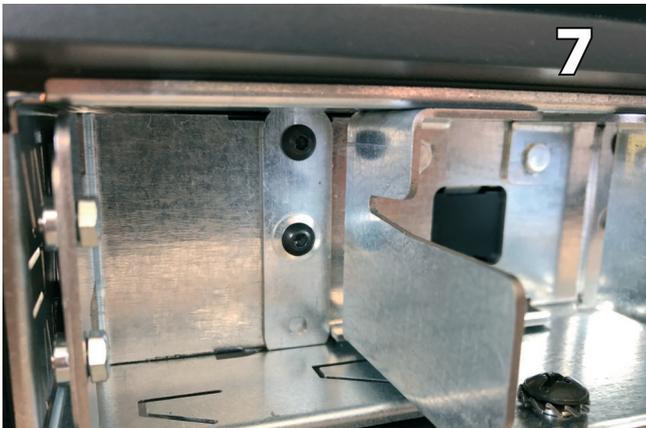

Close the locking tabs and secure with the necessary screws




Put the DIN cover over the unit

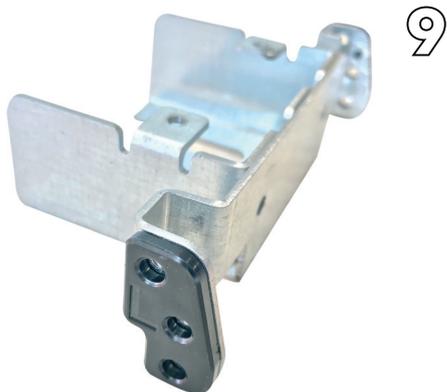

Click the plastic tabs onto the metal holder as shown



By using the two top screws, mount the screen holder to the screen

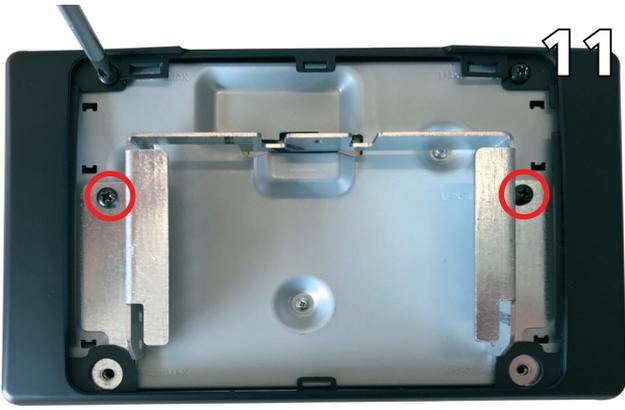


11

Put the screen holder on and fix only the top two screws



12

install the metal holder - you can adjust height and angle by using different positions

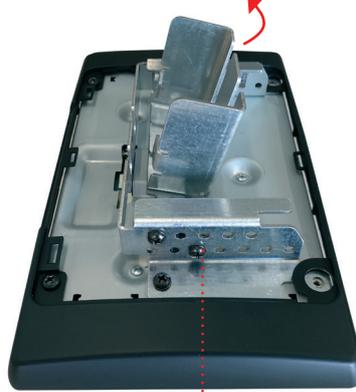

13

After having determined the correct position install the bottom cover



14

If the bottom cover collides with the metal bracket, you need to break off some strips






Fix the bottom cover using two screws



Slide the screen into the support and secure with two screws

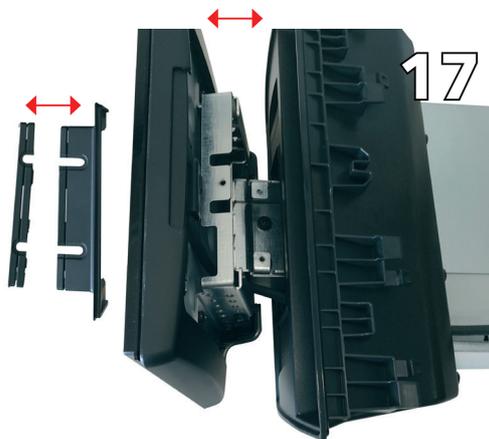

Verify the necessary length of the neck cover



Install the neck cover onto the screen and fix the screws



Slide the cover onto the screen and fix the screw



Put the screw cover over it



Install the front cover with the chrome bezel



Final product image